

# Release Document for using Oracle Enterprise Linux 5.8 on logical partitioning manager

## 1. Restrictions

- (1) Oracle Enterprise Linux 5.8 (OEL 5.8 henceforth) supports NIC2 (Intel 82576) for shared NIC and virtual NIC. Cannot use NIC1 (PRO/1000).
- (2) Cannot use the "Concurrent Maintenance mode" in "Migration" function on HVM Navigator to the LPAR which is using OEL 5.8.

## 2. Setting options after installing the OS

- (1) When using OEL 5.8 with LP mode, you need to change the settings after installing the OS.

Please see and perform the contents of the Red Hat Enterprise Linux 5.7 (x86\_64) that are described in the section "Red Hat Enterprise Linux 5.6/5.7 using the Driver CD" (except the clause "Driver/Kernel Setup" <sup>\*1</sup>) and the section "Appendix" in Chapter 8 in *CB2000 SOFTWARE GUIDE*.

<sup>\*1</sup> Do not perform the clause "Driver/Kernel Setup" in the section.

- (2) You may monitor HBA performance data for LPARs with any version of the HVM driver for OEL 5.8 on HVM Navigator.