



Hitachi Compute Blade 500 Series NVIDIA GPU Adapter User's Guide

FASTFIND LINKS

[Getting Help](#)

[Contents](#)

© 2010-2014 Hitachi, Ltd. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or stored in a database or retrieval system for any purpose without the express written permission of Hitachi, Ltd.

Hitachi, Ltd., reserves the right to make changes to this document at any time without notice and assumes no responsibility for its use. This document contains the most current information available at the time of publication. When new or revised information becomes available, this entire document will be updated and distributed to all registered users.

Some of the features described in this document might not be currently available. Refer to the most recent product announcement for information about feature and product availability, or contact Hitachi Data Systems Corporation at <https://portal.hds.com>.

Notice: Hitachi, Ltd., products and services can be ordered only under the terms and conditions of the applicable Hitachi Data Systems Corporation agreements. The use of Hitachi, Ltd., products is governed by the terms of your agreements with Hitachi Data Systems Corporation.

Hitachi is a registered trademark of Hitachi, Ltd., in the United States and other countries. Hitachi Data Systems is a registered trademark and service mark of Hitachi, Ltd., in the United States and other countries.

Archivas, Essential NAS Platform, HiCommand, Hi-Track, ShadowImage, Tagmaserve, Tagmasoft, Tagmasolve, Tagmastore, TrueCopy, Universal Star Network, and Universal Storage Platform are registered trademarks of Hitachi Data Systems Corporation.

AIX, AS/400, DB2, Domino, DS8000, Enterprise Storage Server, ESCON, FICON, FlashCopy, IBM, Lotus, OS/390, RS6000, S/390, System z9, System z10, Tivoli, VM/ESA, z/OS, z9, zSeries, z/VM, z/VSE are registered trademarks and DS6000, MVS, and z10 are trademarks of International Business Machines Corporation.

All other trademarks, service marks, and company names in this document or website are properties of their respective owners.

Microsoft product screen shots are reprinted with permission from Microsoft Corporation.



Contents

Preface	v
Intended Audience	vi
Release Notes	vi
Document Conventions.....	vii
Getting Help.....	viii
Comments	viii
Overview	2-1
Installation of Drivers.....	3-1
Installation drivers for vSGA	3-6
Installation drivers for vDGA.....	3-7
Specifications	3-1
Acronyms and Abbreviations.....	1



Preface

This document describes how to use the NVIDIA GPU Adapter for Hitachi CB 500 Series..

This preface includes the following information:

- [Intended Audience](#)
- [Release Notes](#)
- [Document Conventions](#)
- [Getting Help](#)
- [Comments](#)

Notice: The use of NVIDIA GPU Adapter for Hitachi CB 500 Series and all other Hitachi Data Systems products is governed by the terms of your agreement(s) with Hitachi Data Systems.

Intended Audience

This document is intended for the personnel who are involved in planning, managing, and performing the tasks to prepare your site for Compute Blade installation and to install the same.

This document assumes the following:

- The reader has a background in hardware installation of computer systems.
- The reader is familiar with the location where the Hitachi Compute Blade 500 Series will be installed, including knowledge of physical characteristics, power systems and specifications, and environmental specifications.

Release Notes






Release notes contain requirements and more recent product information that may not be fully described in this manual. Be sure to review the release notes before installation.

Document Conventions

This document uses the following typographic conventions:

Convention	Description
Bold	Indicates text on a window, other than the window title, including menus, menu options, fields, and labels. Example: Click OK .
<i>Italic</i>	Indicates a variable, which is a placeholder for actual text provided by the user or system. Example: <i>copy source-file target-file</i> Note: Angled brackets (< >) are also used to indicate variables.
screen/code	Indicates text that is displayed on screen or entered by the user. Example: # pairdisplay -g oradb
< > angled brackets	Indicates a variable, which is a placeholder for actual text provided by the user or system. Example: # pairdisplay -g <group> Note: Italic font is also used to indicate variables.
[] square brackets	Indicates optional values. Example: [a b] indicates that you can choose a, b, or nothing.
{ } braces	Indicates required or expected values. Example: { a b } indicates that you must choose either a or b.
vertical bar	Indicates that you have a choice between two or more options or arguments. Examples: [a b] indicates that you can choose a, b, or nothing. { a b } indicates that you must choose either a or b.
<u>underline</u>	Indicates the default value. Example: [<u>a</u> b]

This document uses the following icons to draw attention to information:

Icon	Meaning	Description
	WARNING	This indicates the presence of a potential risk that might cause death or severe injury.
	CAUTION	This indicates the presence of a potential risk that might cause relatively mild or moderate injury.
	NOTICE	This indicates the presence of a potential risk that might cause severe damage to the equipment and/or damage to surrounding properties.
	Note	This indicates notes not directly related to injury or severe damage to equipment.
	Tip	This indicates advice on how to make the best use of the equipment.

Getting Help

If you purchased this product from an authorized HDS reseller, contact that reseller for support. For the name of your nearest HDS authorized reseller, refer to the HDS support web site for locations and contact information. To contact the Hitachi Data Systems Support Center, please visit the HDS website for current telephone numbers and other contact information:
<http://support.hds.com>.

Before calling the Hitachi Data Systems Support Center, please provide as much information about the problem as possible, including:

- The circumstances surrounding the error or failure.
- The exact content of any error message(s) displayed on the host system(s).

Comments

Please send us your comments on this document: doc.comments@hds.com. Include the document title, number, and revision, and refer to specific sections and paragraphs whenever possible. All comments become the property of Hitachi Data Systems Corporation. **Thank you!**

Overview

This chapter describes the overview of NVIDIA GPU Adapter.

- [Features](#)
- [Supported OSs](#)
- [Attachments](#)

Features

The GPU Adapter is designed for installation into PCI Express slot.

ESXi supports 2 ways of hardware accelerations shown below.

- vDGA(Virtual Dedicated Graphics Acceleration)

Single virtual machine uses one GPU Adapter.

- vSGA(Virtual Shared Graphics Acceleration)

Multiple virtual machines share single GPU Adapter.



vDGA is not supported as of December, 2013. Please contact our staff if you need support schedule.

Supported OSs

The GPU Adapter can be used for OSs shown below.

- ESXi 5.1 U2
- ESXi 5.5

Attachments

Prior to using your GPU Adapter, check if there are any missing attachments.

Installation of Drivers

This chapter describes installation procedure of GPU Adapter's Driver

- [Confirmation before installing GPU Adapter](#)
- [Installation drivers for ESXi](#)

Confirmation before installing GPU Adapter

This section describes confirmation items before installing GPU Adapter.


Checking the settings of EFI

Check [Active Video] settings. If the [Active Video] is not set to [Onboard Device], nothing is displayed on the Remote Console.

1. Start Remote Console and power on the server blade.
2. During powering on, when [<F1>Setup] appears at the bottom of the screen, press [F1] key.
3. Setup menu starts and the "System Configuration and Boot Management" Menu is shown, then choose [System Settings] and press [Enter] key.



4. If [System Settings] is displayed, choose [Devices and I/O Ports] and press [Enter] key.

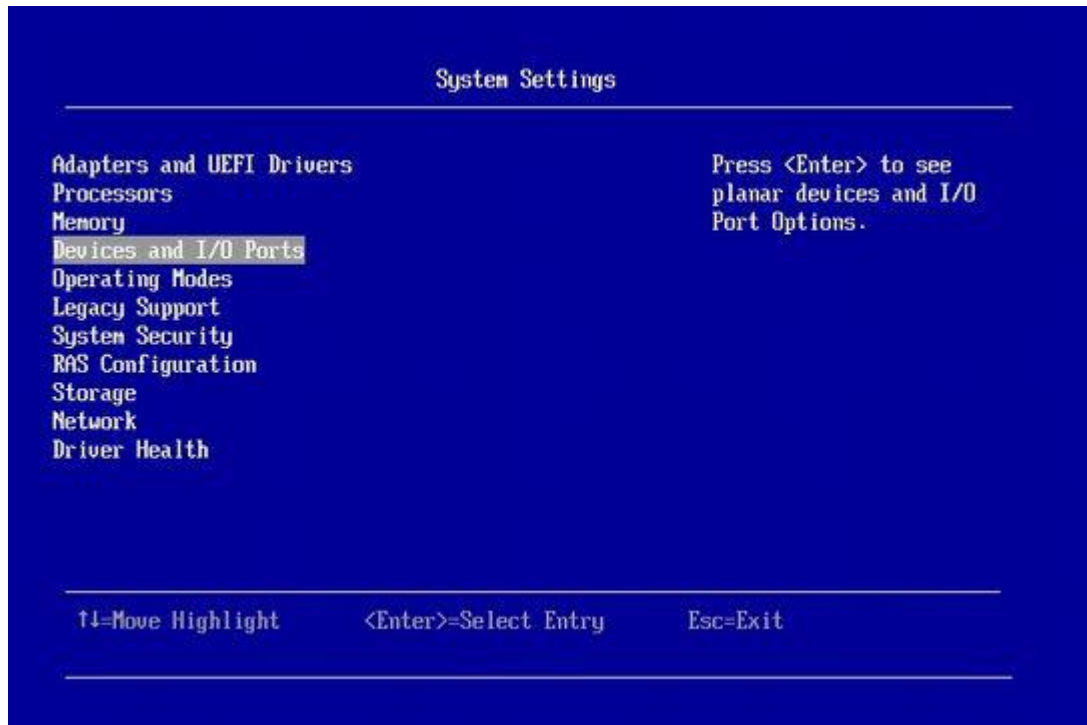

5. If [Devices and I/O Ports] is displayed, [Active Video] current setting is also displayed. Check the current setting. If [Onboard Device], you don't need to change the setting, follow the step 8~9 to exit the setup menu. If [Add-in Device], choose [Add-in Device] and press [Enter] key.



6. If the [Active Video] setting dialog is displayed, choose [Onboard Device] and press [Enter] key.



7. Check if the [Active Video] current setting is [Onboard Device].



8. Press [Esc] key several times until [System Configuration and Boot Management] is displayed. Choose [Save Settings] and press [Enter] key.



9. Choose [Exit Setup] and press [Enter] key.

10. If the confirmation dialog is displayed, press [Y] key.



Installation drivers for ESXi

This section describes installation procedure of GPU Adapter's Driver

Installation drivers for vSGA

Use conditions are provided the document shown below.

Chapter: "Virtual Machine Graphics Acceleration Deployment Guide"

<http://www.vmware.com/files/pdf/techpaper/vmware-horizon-view-graphics-acceleration-deployment.pdf>

1. Access the URL shown below, and download the driver.
http://www.nvidia.com/Download/index.aspx?lang=en_us
Product Type: GRID
Product Series: GRID Series
Product: GRID K2
Operating System: VMware vSphere ESXi 5.1 or 5.5
2. Transfer installation package to the hypervisor host.
(Directory: /vmfs/volumes/datastore1/ etc.)
3. Shutdown all virtual machines and place the hypervisor host into Maintenance mode.
4. Change Acceptable Level of hypervisor host below VMwareAccepted.

Example

```
# esxcli software acceptance get
VMwareCertified
# esxcli software acceptance set --level=VMwareAccepted
Host acceptance level changed to 'VMwareAccepted'.
# esxcli software acceptance get
VMwareAccepted
```

5. Installation the driver.
Access the URL shown below, and follow an install procedure shown in "vSGA Installation" Chapter in "Virtual Machine Graphics Acceleration Deployment Guide".

<http://www.vmware.com/files/pdf/techpaper/vmware-horizon-view-graphics-acceleration-deployment.pdf>

6. Configure Graphic acceleration.

The options shown below are available.

- Automatic(Default)

This option uses hardware acceleration if there is capable, and available. If hardware acceleration is not available, it uses software 3D rendering automatically.

- Software

This option only uses software 3D rendering.

- Hardware

This option only uses hardware 3D rendering.

Note that if a GPU Adapter is not present in the host, the virtual machine will not start.

The details of these options are provided by the document shown below.

Chapter: "Understanding the Differences Between Soft 3D/SVGA, vDGA and vSGA"

<http://www.vmware.com/files/pdf/techpaper/vmware-horizon-view-graphics-acceleration-deployment.pdf>

To configure on the vSphere web client 5.5, access the URL shown below and see "vSphere Virtual Machine Administration Guide"

<https://www.vmware.com/support/pubs/vsphere-esxi-vcenter-server-pubs.html>

Installation drivers for vDGA



vDGA is not supported as of December, 2013. Please contact our staff if you need support schedule.

The virtual machines must be running Windows7 or higher. When you use vDGA, however installation of drivers on hypervisor is not needed, installation on guest OSs is needed. Detail use conditions are provided the document shown below.

"Virtual Machine Graphics Acceleration Deployment Guide"

Chapter: "vDGA Installation"

<http://www.vmware.com/files/pdf/techpaper/vmware-horizon-view-graphics-acceleration-deployment.pdf>

1. Access the URL shown below, and download the driver.

http://www.nvidia.com/Download/index.aspx?lang=en_us

Product Type: GRID

Product Series: GRID Series

Product: GRID K2

Operating System: Windows 7 (or higher) 32-bit or 64-bit

2. Installation the driver.

Access the URL shown below, and follow an install procedure shown in "vDGA Installation" Chapter in "Virtual Machine Graphics Acceleration Deployment Guide".

<http://www.vmware.com/files/pdf/techpaper/vmware-horizon-view-graphics-acceleration-deployment.pdf>

Specifications

This chapter describes specifications of GPU Adapter.

- [Specifications](#)

Specifications

Item	specification
Product Name	NVIDIA GRID K2
Chip	2× GK104
Processor clock	745MHz
Memory clock	2.5GHz
Memory size	4GB per GPU(8GB per board)
Memory I/O	256bit GDDR5
Memory configuration	32 pieces of 128M × 16 GDDR5 SDRAM
Display connectors	None
Power connectors	-1x 8-pin PCI Express power connector - 1x 6-pin PCI Express power connector
Total board power	225W

Acronyms and Abbreviations

GPU	Graphics Processing Unit
OS	Operating System
vDGA	Virtual Dedicated Graphics Acceleration
vSGA	Virtual Shared Graphics Acceleration

Hitachi Data Systems

Corporate Headquarters

2845 Lafayette Street
Santa Clara, California 95050-2639
U.S.A.

www.hds.com

Regional Contact Information

Americas

+1 408 970 1000

info@hds.com

Europe, Middle East, and Africa

+44 (0) 1753 618000

info.emea@hds.com

Asia Pacific

+852 3189 7900

hds.marketing.apac@hds.com

